


warming

CW-2A COOKER/WARMER®

WARMERS

HAGAR

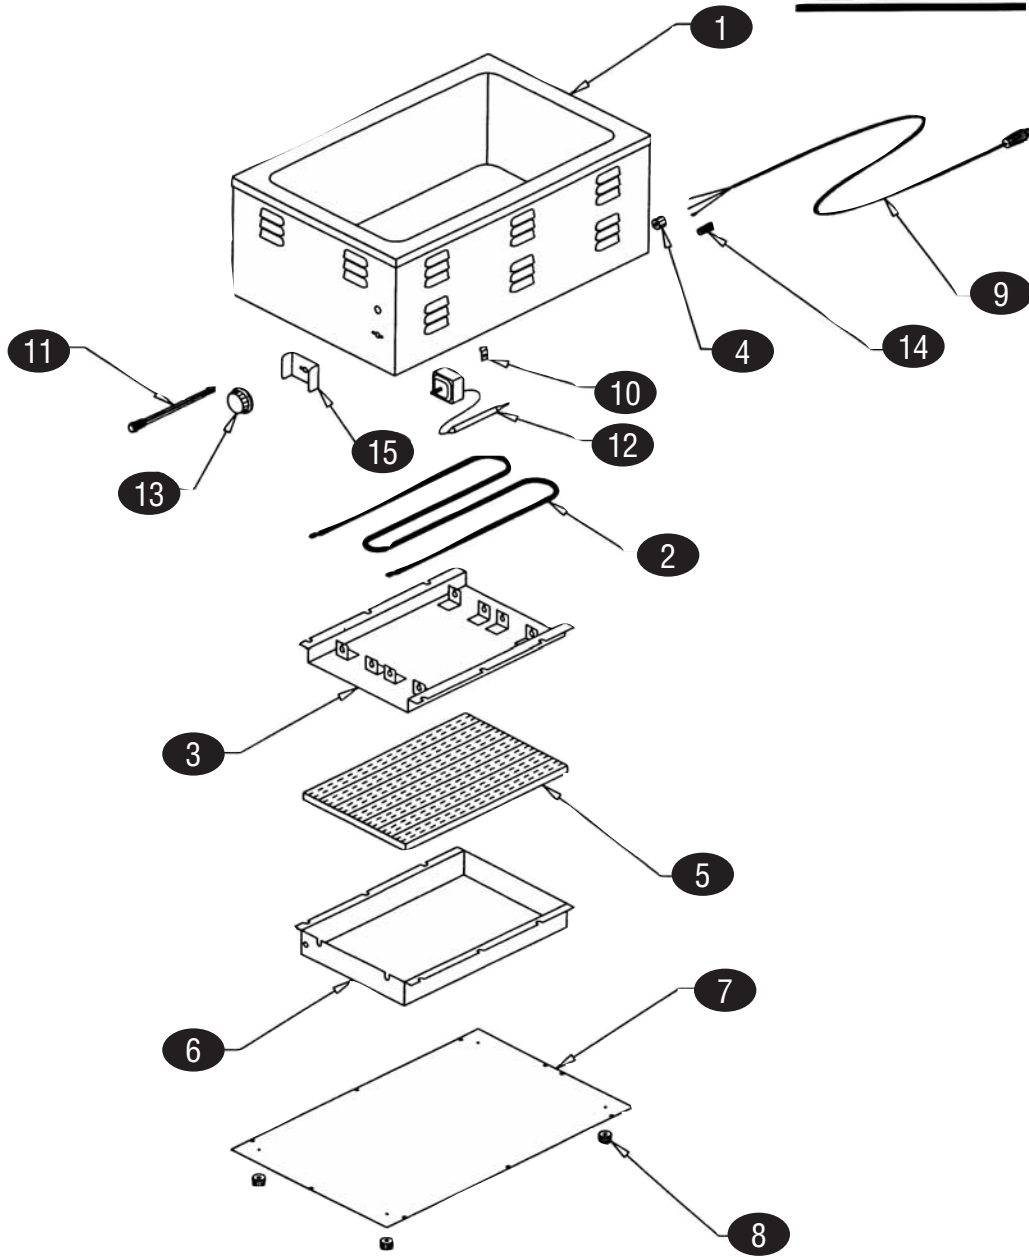

KEY	PART #	DESCRIPTION	KEY	PART #	DESCRIPTION
A	APWCW-2A	Cooker/Warmer, Complete Unit, 120V 1500W	12	APW60320	Thermostat
1	APW55973	Pan & Wrapper Assembly	13	APW60321	Thermostat Knob
2	APW56322	Heating Element, 120V-1500W	14	APW89475	Wire Nut
	APW55441	Heating Element, 240V-1600W	15	APW54801	Knob Guard
3	APW56506	Reflector Pan		APW88961	Hex Nut, #10-24 Green
4	APW89101	Strain Relief Bushing		APW89061	Hex Nut, #10-24
5	APW56547	Insulation		APW89025	Speed Nut, #10-25
6	APW55610	Element cover		APW89059	Lockwasher, #10 External
7	APW55895	Bottom Cover		APW89073	Sheet Metal Screw, #8x1/2"
8	APW55768	Rubber Foot		APW89425	Fiberglass Sleeving
9	APW55947	Cord, 120V		APW55719	Wire Harness
10	APW89120	Jiffy Clip			
11	APW56530	Indicator Light			